

CONTENTS

BEFORE USING THE WASHING MACHINE

FIRST WASH CYCLE

PRECAUTIONS AND GENERAL RECOMMENDATIONS

DESCRIPTION OF THE WASHING MACHINE

CHILD SAFETY

PREPARATION OF THE WASHING

DETERGENT AND ADDITIVES

WASHING PROGRAMME

REMOVING THE FILTER

DRAINING RESIDUAL WATER

CARE AND MAINTENANCE

TROUBLESHOOTING GUIDE

AFTER-SALES SERVICE

TRANSPORT / HANDLING

INSTALLATION

ELECTRICAL CONNECTION

BEFORE USING THE WASHING MACHINE

1. Removing the packaging and inspection

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Remove the transit bolts

- The appliance is fitted with transit bolts to prevent internal damage during transport. **Before using the washing machine, you must remove the transit bolts** (see "Installation/Remove the transit bolts").

3. Install the washing machine

- Move the machine without carrying it by the worktop.
- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level using a spirit level (see Installation/Adjust the feet").

4. Water supply

- Connect the water supply inlet hose in accordance with the regulations of your local water company (see "Installation/Connect the water inlet hose").
- Water supply: Cold water only
- Tap: 3/4" threaded hose connector.
- Pressure: 0.05-1.00 MPa (0.5-10 bar).

5. Drain

- Connect the drain hose to the siphon or hook it over the edge of a sink with the "U" bend (see "Installation/Connect the water drain hose").
- If the washing machine is connected to a built-in drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect).

6. Electrical connection



- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Voltage information, power consumption and electrical protection data are supplied on the inside of the filter cover.
- The appliance must be connected exclusively by means of a socket with an earth connection in accordance with current regulations. The appliance must be earthed by law. The manufacturer declines all liability for damage to persons or property deriving directly or indirectly from failure to observe the directions.
- Do not use extension leads or multi sockets.
- Before any maintenance on the washing machine disconnect it from the mains supply.
- After installation, access to the mains plug or disconnection from the mains supply must be ensured at all times via a double-pole switch.
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service.
- Mains cable replacement is only to be carried out by After-Sales Service.
- The appliance must only be used in the household for the prescribed uses.

Minimum housing dimensions:

Width:	590 mm
Height:	845 mm
Depth:	395 or 335 mm

FIRST WASH CYCLE

This initial cycle without laundry serves to eliminate any water remaining after your appliance was tested at the factory.

1. Open the tap.
2. Close the door.
3. Pour a small amount of detergent (about 30 ml)  into the detergent dispenser.
4. Select a short programme (see programme chart).
5. Press "On/Off" button .

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing

- The packing material is recyclable as indicated by the recycling symbol . Adhere to local regulations when disposing of packaging material.

2. Energy saving tips

- Achieve the best use of energy, water, detergent and time by using the recommended maximum load size.
- Do not exceed manufacturers' recommended dosages as shown on the detergent package.
- The Eco Flap - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment.
- Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry. You save on water, energy and time as a result.
- Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash program.
- Save energy by using a 60° C instead of a 90° C wash programme or a 40° C instead of a 60° C wash programme.
- Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a drying programme (for machines with adjustable spin speed).

3. Disposing of packaging and old appliances

- The washing machine is built from reusable materials. Dispose of the appliance in conformity with environmental regulations.
- Before scrapping, cut off the power cable so that the washing machine cannot be connected to the mains.
- Remove detergent from compartment if you intend scrapping your appliance.


4. Child safety

- Children must not be allowed to play with the washing machine.

5. General recommendations


- When the appliance is not in use unplug it and turn off the tap.
- Before cleaning or carrying out maintenance switch off the washing machine and disconnect it from the mains supply.
- To clean the outside of the washing machine, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Do not attempt to force the door open.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

6. EC Declaration of Conformity

- This washing machine has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
 73/23/EEC Low Voltage Directive
 89/336/EEC Electromagnetic Compatibility Directive
 93/68/EEC CE Marking Directive .

DESCRIPTION OF THE WASHING MACHINE

1. Worktop
2. Control panel
3. Detergent dispenser
4. Door
5. Door handle
- To open the door press the button inside the handle and pull.
- Close the door by pushing it firmly (the lock will click into place)
6. Filter (behind cover)
7. After-Sales Service sticker (inside door)
8. Adjustable feet
9. Technical specifications sticker (inside cover)

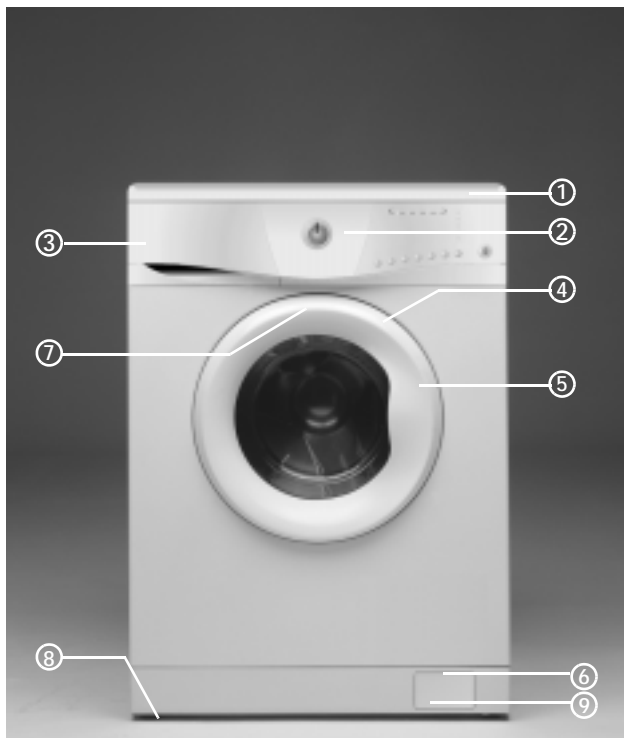

CHILD SAFETY

An electrical device prevents the door from opening while the appliance is in operation.

PREPARATION OF THE WASHING

Sort the laundry

1. Sort the laundry according to...

- **Type of fabric / care label symbol**

Cottons, mixed fibres, easy care/synthetics, wool, handwashed items.


- **Colour**

Separate whites and coloured items. Wash new coloured articles separately.

- **Size**

Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum.

- **Fabric delicacy**

Wash delicate articles separately: Use a special programme for Pure New Wool , curtains and other delicates. Always remove curtain glides or wash curtains with the glides inside a cotton bag. Use the special programme for handwash fabrics. Wash small articles (e.g. nylon stockings, belts etc.) and articles with hooks (e.g. bras) in special cotton bags for washing machines or in zipped pillow cases.



- 2. **Empty pockets**

Coins, safety pins and similar items can damage your laundry and the appliance drum and tub.

- 3. **Fasteners**

Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

Stain removal

- Blood, milk, egg and other organic substances are generally removed by the enzyme phase of the programme.
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent in detergent dispenser  or chlorine bleach in compartment  (depending on model).
- Particularly stubborn stains can be treated with stain remover before the wash.

Dyeing and Bleaching

Commercially available products usually consist of a dye colour, fixing agent and salt. Pour the dye colour, the fixing agent and then the salt directly into the empty drum. Fill in the laundry only afterwards.

- Use exclusively dyes and bleaches recommended for washing machines.
- Follow the Manufacturer's instructions.
- Plastic and rubber components of the machine can be stained by dyes.

Loading the laundry

1. Open the door.
2. Load the articles one at a time loosely into the drum, without overfilling. Follow loads recommended in the "programme chart". Overloading will result in unsatisfactory washing results and creased laundry.
3. Close the door.

DETERGENT AND ADDITIVES

Choice of detergent and additives

The type of detergent depends on:

- type of fabric (cottons, easy care/synthetics, delicate items, wool).

Note: use only specific detergents for wool.

- colour;
- wash temperature;
- degree and type of soiling.

Notes:

Whitish residues on dark fabrics are caused by insoluble detergent components used in modern phosphate-free powder detergents.

If this occurs, shake or brush out the fabric or use liquid detergents.

Keep detergents and additives in a dry place and out of reach of children.

Use only detergents and additives specifically produced for domestic washing machines.

If you use descaling agents, dyes or bleaches, make sure they are suitable for washing machine use. Descaler could contain components that can attack parts of your washing machine.

Do not use solvents in the machine

(e.g. turpentine, benzine, etc.).

Do not machine wash fabrics that have been treated with solvents or flammable liquids.

Dosage

Follow the instructions on the detergent pack in relation to:


- the degree and type of soiling;
- the size of the load;
- full load: follow the detergent manufacturer's instructions;
- half load: 3/4 of the normal amount;
- minimum load (about 1 kg): 1/2 the amount used for full load;

- water hardness in your area (ask for information from your water company). soft water requires less detergent than hard water.

Notes:

Overdosing the detergent results in excessive foaming and reduces the wash efficiency. If the appliance detects excessive foam it may prevent spinning.

Using insufficient detergent results in grey laundry and increased scale deposits on the drum, tub and heating element.

You can use liquid detergent in the "Prewash" phase for programmes with this option. In this case put only powder detergents in the compartment for the main wash .

When using concentrated fabric softeners, add water in the detergent dispenser up to the "MAX" level mark.

To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball supplied with the detergent and place it inside the drum.

Water hardness: soft water requires less detergent.








WATER HARDNESS CATEGORY:	CHARACTERISTICS	GERMAN °dh	FRENCH °fh	ENGLISH °eh
1	soft	0-7	0-12	0-9
2	average	7-14	12-25	9-17
3	hard	14-21	25-37	17-26
4	very hard	over 21	over 37	over 26

Filling the detergent and additives



1. Pull out the detergent dispenser completely, until the limit.

The dispenser has three chambers.

2. Add the detergent:

- Programme with pre- and main wash  
- Main wash programme without prewash 
- Fabric softeners, conditioners and chlorine bleach: no more than to "MAX" mark 
- Stain remover 
- Water softener (water hardness class 4) 
- Starch (dissolved in water) 

3. Close the detergent dispenser completely.

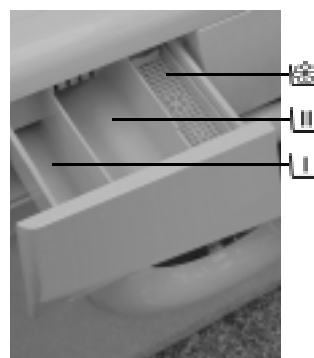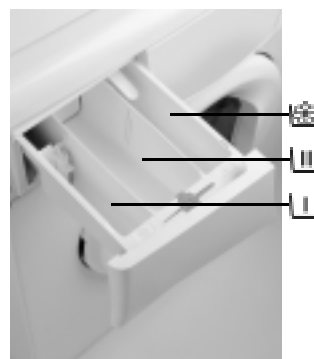

WASHING PROGRAMME

Select the programme:

1. Check that the **Programme Selector** is on "○".
2. Plug in the appliance.
3. Open the tap.
4. Set the **Programme Selector** to the desired programme.
5. Press the "Spin Speed Reduction" button.
 - Every programme has an automatic predefined maximum spin speed.
 - Press the button to set another spin speed. The corresponding LED lights up.
 - If the spin speed "0" is selected, the final spinning is cancelled. The water is drained out only.
6. Depending on model, set the **Spin Speed Selector** knob to the desired spin speed.
7. Select the **options** desired by pressing the corresponding buttons. The button lights up when it is pressed.
 - The "Start" button turns off and on again once the programme has started only.
8. Check that the door is well closed. Press the "On/Off" ① button.
9. The "Start" button is flashing. Press the "Start" button to start the programme.

Door lock

The door locks automatically after the programme start until the end of the programme.

If the programme selector is moved to the "○" position or if the electricity supply is interrupted, then the door is released after approximately two minutes.

In this case do not open the door: because hot water could come out of the door.

Programme end

The end LED (programme phase indicator) is alight. The programme selector knob is at the "○" position.

1. Press "On/Off" button ①.
2. Turn off the tap.
3. Open the door and unload the machine.

N.B. Do not fully close the door but leave it ajar to allow the drum to dry out.

How to change or stop a programme during the washing cycle.

1. Check that the **Programme Selector** is on "○".
 2. Set the **Programme Selector** to the desired programme.
 3. Press the "Spin Speed Reduction" button.
 - Every programme has an automatic predefined maximum spin speed.
 - Press the button to set another spin speed. The corresponding LED lights up.
 - If the spin speed "0" is selected, the final spinning is cancelled. The water is drained out only.
 4. Depending on model, set the **Spin Speed Selector** knob to the desired spin speed.
 5. Select the **options** desired by pressing the corresponding buttons. The button lights up when it is pressed.
 - The "Start" button turns off and on again once the programme has started only.
 6. Check that the door is well closed. Press the "On/Off" ① button.
 7. The "Start" button is flashing. Press the "Start" button to start the programme.
- Do not add detergent.

REMOVING THE FILTER

1. Stop the appliance and unplug it.
2. Open the filter cover.
3. Place a bowl beneath the filter.
4. Slowly turn the filter anticlockwise without extracting it as yet.
5. Wait until all the water has drained.
6. Now unscrew the filter completely and extract it.
7. Remove any foreign items from the foreign body trap.
8. Insert the filter and screw it in clockwise until it locks, making sure it is hermetically closed.
9. Close the cover.
10. Pour 0.5 l of water into the detergent dispenser to reactivate the "Eco System".
11. Connect the appliance to the electrical outlet.
12. Select a programme and start it.

Check the filter two or three times a year and clean it if necessary.

- Check the filter if the appliance is not draining correctly or if it fails to perform spin cycles.

IMPORTANT: Make sure the water has cooled before draining the appliance.



DRAINING RESIDUAL WATER

- To drain the residual water from the pump, tilt the machine forwards and proceed as per points 8 and 10 of the previous chapter.

When should I drain residual water?

- Before transporting (moving) the machine.
- If the appliance is installed in a room subject to sub-zero temperatures. In this case the machine should be drained after every wash.

CARE AND MAINTENANCE

Appliance exterior and control panel

- Clean using normal household cleaner (do not use abrasive products and no solvents).
- Dry with a soft cloth.


Door seal


- Clean with a damp cloth when necessary.
- Check the condition of the door seal periodically.

Filter

- Check and clean the filter two or three times a year (see "Removing the Filter").

Detergent dispenser

1. Disengage the detergent dispenser by pressing the release lever in the prewash compartment and extract it .
2. Remove the siphon from the softener and bleach compartment.
3. Wash all the parts under running water.
4. Reposition the siphon and refit the detergent dispenser.

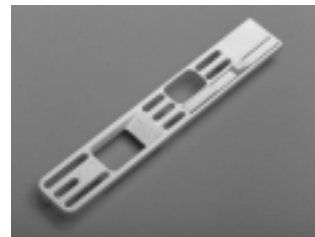

Water hose mesh strainer

Check and clean periodically.

For machines with a straight water supply hose


1. Turn off the tap.
2. Unscrew the hose from the tap.
3. Clean the internal strainer.
4. Screw the supply hose back onto the tap.
5. Unscrew the hose from the appliance.
6. Remove the filter from the washing machine with pliers and clean it.
7. Refit the filter and screw the hose connection to the appliance.
8. Turn on the tap and **ensure that the connections are completely water-tight.**



TROUBLESHOOTING GUIDE

The appliance will not start, the "Start" button is not flashing.

Check whether:

- the appliance is plugged in;
- the wall socket is functioning correctly (use a table lamp or similar).
- ON/OFF button pressed .



The appliance will not start, but the "Start" button is not flashing.

Check whether:

- the appliance door is properly closed;
- a programme has been selected;
- the water tap is turned on. If not, turn on the tap and switch the appliance off and press the "Start" button.

The appliance stops during the programme.

Check whether:

- the "Rinse Hold"  button lights up; terminate this option by pressing the button again;
- The "Start" button is flashing. Press the "On/Off" button .


Insufficient or no water supply.

Check whether:

- the tap is turned on completely;
- kinks are present in water hose;
- the water hose filter is clogged;
- the water hose is frozen up;

Waste water not pumped out.

Check whether:

- the drain hose is correctly installed (see "Installation Instructions").
- the filter is clogged.
- the drain hose is frozen up.
- The "Rinse Hold" button is pressed .

Detergent and additive product residues in detergent drawer at end of wash.

Check whether:

- the siphon is correctly installed and clean (see "Care and maintenance");
- enough water is being supplied. The mesh filters between the inlet hose and the tap could be clogged (see "Care and maintenance"). Check and clean the filter two or three times a year (see "Removing the Filter").

Also see "Detergent and Additives".

Machine vibrates during spin cycle.

Check whether:

- Machine is perfectly horizontal with all four feet on ground (see "Installation");
- the transit bolts have been removed. The transit bolts must be removed before the appliance can be used (see "Installation").

Final spin results are poor:

The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts.

- If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.
- Excessive foam formation may also prevent spinning. Ensure correct amount of detergent is used

Important: wait one hour and if the fault re-occurs, contact After-Sales Service, quoting the error number displayed (see "After-Sales Service").

AFTER-SALES SERVICE

Before contacting After-Sales Service:

1. Try to remedy the problem yourself (see "Troubleshooting Guide").
2. Restart the programme to check whether the problem has solved itself.
3. If the machine continues to function incorrectly, call After-Sales Service.

Specify:

- The nature of the problem.
- The exact model of the appliance.
- The service code (number after the word SERVICE).

SERVICE 0000 000 00000



The After-Sales Service sticker is on the inside of the door.

- Your full address.
 - Your telephone number and area code.
- After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

TRANSPORT / HANDLING

Never move the appliance by carrying it by the worktop.

1. Unplug the appliance.
2. Turn off the tap.
3. Disconnect the inlet and drain hoses.
4. Eliminate all water from the hoses and from the appliance (see "Removing the Filter", "Draining residual water").
5. Fit the transit bolts (obligatory) (see "Installation").

INSTALLATION


Remove the transit bolts

1. Slacken the three or four bolts (according to model) with the spanner supplied.
2. Unscrew the bolts by hand.
3. Hold the screws together with the plastic spacers and remove them.
4. Close the holes with the plastic covers (supplied with the documents).
5. Keep the transit bolts for future use.

If the plastic spacers remain inside the machine: Open the rear panel by removing the twelve screws, remove the spacers and replace the panel.

Fit the transit bolts before transporting the appliance as follows:

1. Pry off the plastic covers with a screwdriver and remove them.
2. Insert the transit bolts, performing the steps for removal in reverse order.

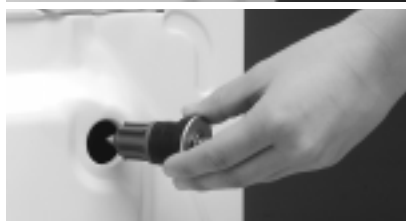

Adjust the feet

If the floor is uneven, adjust the levelling feet as required (do not insert pieces of wood, cardboard etc. under the feet):

1. Loosen the locknut using the wrench provided.
2. Adjust the height of the foot, turning it by hand.
3. Tighten the locknut anticlockwise towards the washing machine.

If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 60 x 60 (or 40) cm sheet of plywood at least 3 cm in thickness. Secure the plywood sheet to the floor.



Worktop for built-under models.

The appliance must only be installed beneath a continuous fitted kitchen worktop.

If the appliance is to be built under, **it is mandatory** to use the cover panel UBS. This can be obtained from specialist shops or from After-Sales Service.

1. Unplug the appliance.
2. Unscrew the worktop fixing screws from the rear of the appliance.
3. Lift the worktop slightly to free it from the housing of the top, then slide it forward to disengage it from the control panel, and remove. Install the cover panel following the relative instructions.
4. Refit the fixing screws and tighten them.
5. Plug the appliance back in.

Connect the water inlet hose

For models with straight hose:

1. Insert the dirt strainer (included in the accessories) into the threaded tap coupling and the coupling between the hose and the washing machine.
2. Carefully screw the hose connection onto the tap, preferably by hand.
3. Make sure there are no kinks in the hose.
4. Carefully screw the hose connection to the appliance inlet, preferably by hand.
5. Turn the tap on fully and check that the joints at the washing machine and the tap are watertight.

If the hose is too short, replace it with a suitable length of pressure resistant hose (1000 kPa min, EN 50084 approved type).

Check the hose regularly for brittleness and cracks and replace if necessary.

The appliance can be connected without a non-return valve.

Connect the water drain hose

1. Unhook the drain hose from the right clip.
Attention: do not unhook the left drain hose connection.
2. Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied.
3. Make sure there are no kinks in the hose.
4. Secure the hose so that it cannot fall down while the appliance is running.

Small hand basins are not suitable.

If the hose is to be inserted directly into the drain pipeline, the inside diameter of the pipe must be appropriate in relation to the diameter of the drain hose.

If you need to add an extension, use a flexible hose of the same type. Secure the unions with screw-on hose clips.

Max. drain hose length: 2.50 m

Max. drain height: 90 cm

Min. drain height: 60 cm



ELECTRICAL CONNECTION

For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

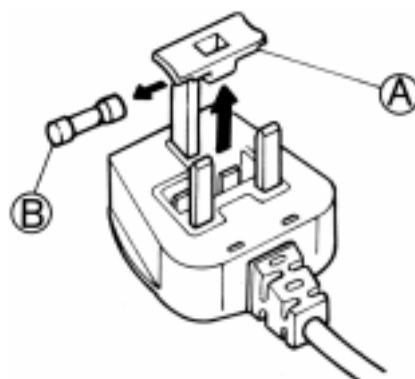

Socket outlet / plug

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service on 0870 600 8989 for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the

2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse.